

JA-151A RB Wireless external siren

The JA-151A RB is a component of the **JABLOTRON 100** system. It is used for system alarm indication outside a building and as a pre-sensing tamper detector. It can also be used for supplementary acoustic signalling (PG activation, arming, chirps). The siren is equipped with a backup battery which powers the siren when the main power is disconnected. The JA-151A RB is completed by assembling two parts, the with the **JA-151A-BASE-RB** base PCB and one of a few optional covers in the **JA-1X1A-C-xx** series. The covers are supplied as a colour combination of cover and flasher. The siren should be installed by a trained technician with a valid certificate issued by an authorized distributor.

For combinations of colour and cover material see the following table:

Cover type	Colour and cover material	Strobe colour
JA-1X1A-C-GR	Grey plastic	Red
JA-1X1A-C-ST	Stainless steel sheet	
JA-1X1A-C-WH	White plastic	
JA-1X1A-C-GR-B	Grey plastic	Blue
JA-1X1A-C-ST-B	Stainless steel sheet	
JA-1X1A-C-WH-B	White plastic	

Installation

The siren should be installed on a vertical wall, with the flasher facing downwards. Avoid installing the siren near the gutters and on other places where there is a danger of ice accumulation.

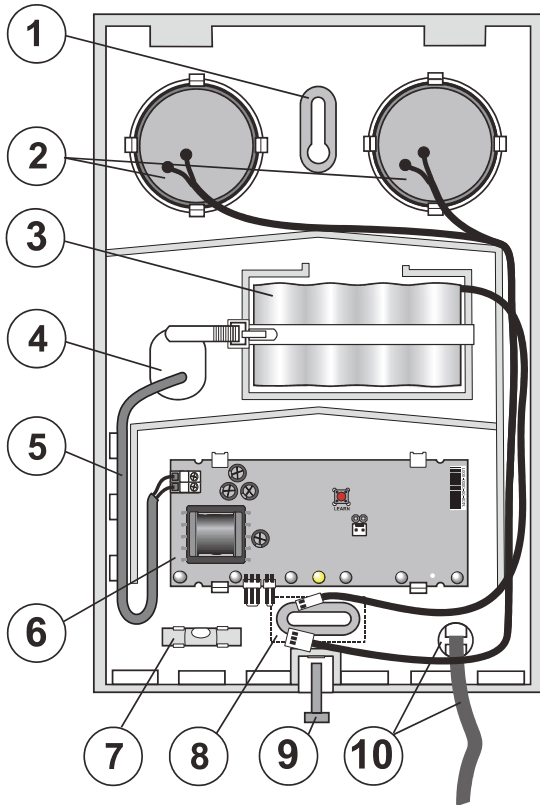


Fig 1 – hole for installing; 2 – piezo sounders; 3 – NiCd battery with reusable battery strap; 4 – hole for cable; 5 – 12V DC power cable; 6 – PCB; 7 – spirit level; 8 – hole for installation with tamper detection; 9 – front cover screw; 10 – string with clip connecting the front cover for easy installation

- Push the power cable (5) through the hole (4) in the bottom part and secure it using the plastic tabs.
- Attach the siren onto a suitable place using 2 screws through the holes (1) and (8). The spirit level can be used for easy installation (7).
- Connect the backup battery to the connector (13).
- Connect the mains power cable to the terminals (11).
- Proceed according to the control panel installation manual.
Basic procedure:
 - There must be a JA-110R radio module installed in the control panel.
 - When the power supply is connected, the yellow LED (14) starts flashing to indicate that the siren has not been enrolled into the system.

- Go to the **F-Link** software, select the required position in the **Devices** tab and launch the enrolment mode by clicking on the **Enroll** option.
 - Press the button marked LEARN (15) – the siren is thus enrolled and the yellow LED indicator goes off.
- Put back the siren cover and attach it using the screw (9).

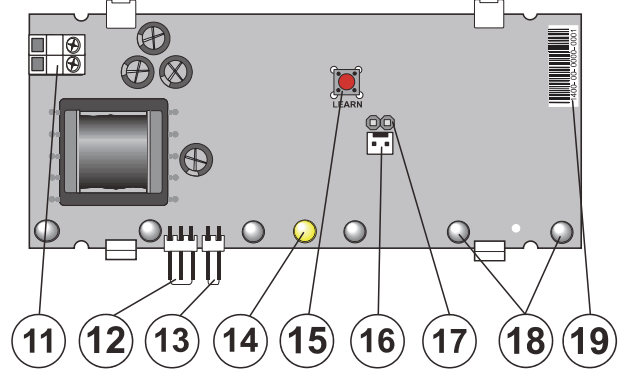


Fig 2: 11– 12V DC power terminals; 12 – piezo siren connection (attention: high voltage); 13 – backup battery connection; 14 – yellow fault indicator; 15 – LEARN (enrolment) button; 16 – external antenna connection; 17 – external antenna jumper; 18 – high intensity red LED flashers; 19 – production code

Internal settings of the siren

The siren properties can be set in the **Devices** window of the F-link software. When at the siren position, use the **Internal settings** option to open a dialog window where you can set: (default settings are marked *):

Sections: to set for which sections the siren should indicate an alarm, as well as setting the chirps. **The default setting is indication for all sections.**

Reaction: defines whether the siren should indicate EW* (external warning) or IW (internal warning); Alarm indication can also be disabled completely (other functions remain enabled).

LED indication: Red* / Blue. According to the siren cover you can choose the colour of the LED indicators.

Siren sound: interrupted*, uninterrupted.

Alarm indication length: 1, 2, 3*, 4, 5 minutes.

Chirps during section control YES / NO* if enabled, the siren chirps once upon setting and twice upon unsetting and three times upon unsetting after an alarm. The signalling only works for the preset sections.

Siren flashing options: During alarms */ (flashes) 30 minutes after an alarm. Extended flashing can be terminated by new system setting or cancellation of alarm indication in the system (with a keypad).

Flashes every 60 seconds: YES / NO* optional indication of siren functioning.

PG output activity indication

The siren can indicate the activity of selected PG outputs with its chirps.

Chirp 1 – slow chirping - 1 per second (for the whole period when the PG is active)

Chirp 2 – rapid chirping - 2 per second (for the whole period when the PG is active)

Chirp 3 - 1 chirp when the PG is activated, 2 chirps when the PG is deactivated

Chirp 4 – a long 20 sec chirp when the PG is activated

Sound priorities

The siren sound has the highest priority, the control chirps have a lower priority and the PG output activity indication has the lowest priority (PG1 has a higher priority than PG2 etc). A chirp with a higher priority always terminates a chirp with a lower priority.

Note: Acoustic power depends on battery charge level.

External antenna use

To improve the communication quality between the control panel and the outdoor siren you can connect an external antenna (AN-80, AN-81, AN-868-2PIN). Plug the antenna into the connector (16) on the PCB. When an antenna is plugged in, disconnect the jumper (17).

Caution: an external antenna has no protection against tampering.

JA-151A RB Wireless external siren

Backup battery replacement

The system reports a low battery automatically. The control panel must be in service mode before you start changing the battery otherwise a tamper alarm will be triggered. Use a BAT-4V8 battery only.

Technical specifications

Power	12 V DC
	230V AC/12 V DC optional adaptor (DE-06-12)
Communication frequency	868.1 MHz, JABLOTRON protocol
Communication range	approx. 300 m (open area)
Backup battery / lifetime	NiCd pack 4.8 V / 1800 mAh
	approx. 3 years
	- minimum loaded voltage 4.0 V
	(replace the battery when voltage drops down this value)
	- maximum unloaded voltage 6.0 V
Piezo electric siren	100 dB/m
Dimensions	200 x 300 x 70 mm
Classification	security grade 2
According to	EN 50131-1, EN 50131-4, EN 50131-5-3
Environmental class	IV general outdoor -25 to +60°C
Security grade	IP44
Also complies with	ETSI EN 300 220-1, EN 50130-4, EN 55022, EN 60950-1, EN 50581
Can be operated to	ERC REC 70-03



JABLOTRON ALARMS a.s. hereby declares that the JA-151A RB is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC and 2011/65/EU. The original of the conformity assessment can be found at www.jablotron.com - Technical Support section



Note: Although this product does not contain any harmful materials we suggest you return the product to the dealer or directly to the producer after use. For more detailed information visit www.jablotron.com.